

Dual Lever Shifter Kit For Dana 300 Transfer Case

Part Number: K-D300TX-N

Installation Instructions


This Kit is designed for the 1980-1986 Jeep CJ's using the Dana 300 transfer case.

Installation requires a few basic tools: 7/16" wrench & socket

3/4" wrench & socket

15/16" wrench & socket

First remove all the original linkage. Easier access can be obtained by removing the floor pan access cover and/or skid plate. Pre-assemble the shifter as shown below.

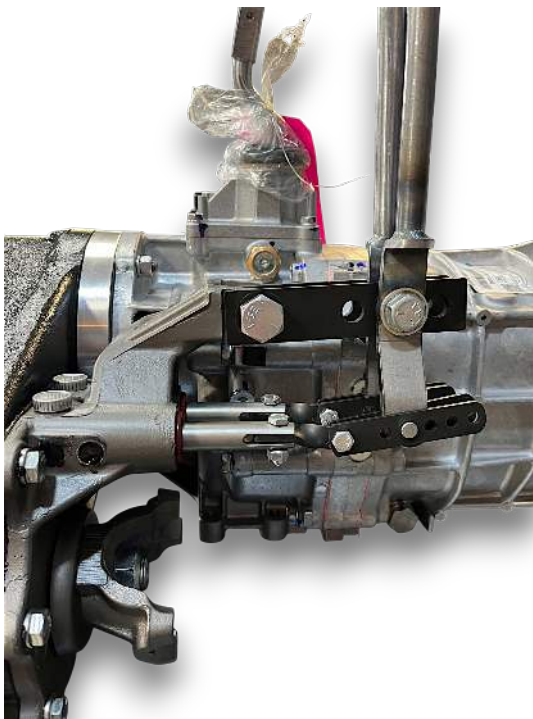

Verify parts required and pre-assemble the kit in this configuration.

Installation Instructions

Page 2.


Part Number:K-D300TX-N

(Please note!) It is very important to install the shifters and spacers as seen in figure 1.

Next, install the shifter kit onto transfer case. Several sets of holes are provided to allow for lever placement variations. Choose the setting that works best for your application. When shifters are correctly located tighten all fasteners. Torque the mounting bolts to 95-105 ft/lbs. Shifter pivot bolt to 10-15 ft/lbs. All other bolts to snug only. **LUBRICATE ALL PIVOT POINTS AND MOVING PARTS.**

Check and lubricate as part of your vehicles regular maintenance.

Shifter pattern

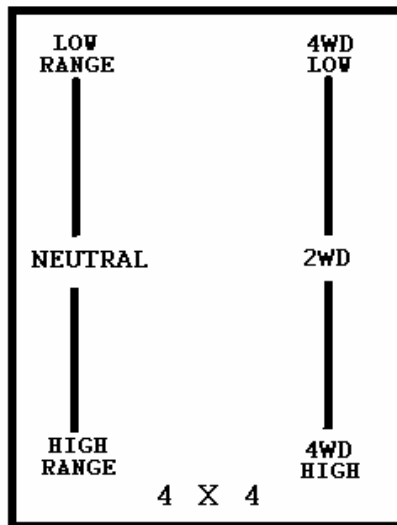

Shifter explanation.

The twin stick shifter will allow you to shift your Dana 300 transfer case into **HIGH** or **LOW** range in either two or four wheel drive. The twin stick will also allow you be in **2WD LOW** **(rear axle only)** should the need arise. (see shift pattern above)